

Installation Instructions

**SMC SLATE STONE
SHOWER BASE**

ATTACH YOUR RECEIPT HERE

Purchase Date _____

! SAFETY INFORMATION

Please read and understand this manual before attempting to install the product.

WARNING

Do not proceed if any question or concern of performing anything found in this manual. If necessary, hire or consult a certified plumber or licensed general contractor to install for you.

CAUTION

Carefully open the box to prevent any damage to the base surface.

CARE AND MAINTENANCE


Simply wipe the surface with a damp towel to remove watermarks and stains. For basic stains, clean with mild detergent or general purpose cleaner. For corners and seams cleaning, spray with mildew cleaner.

WARRANTY


One (1) Year .

PREPARATION







Shower base and Accessories

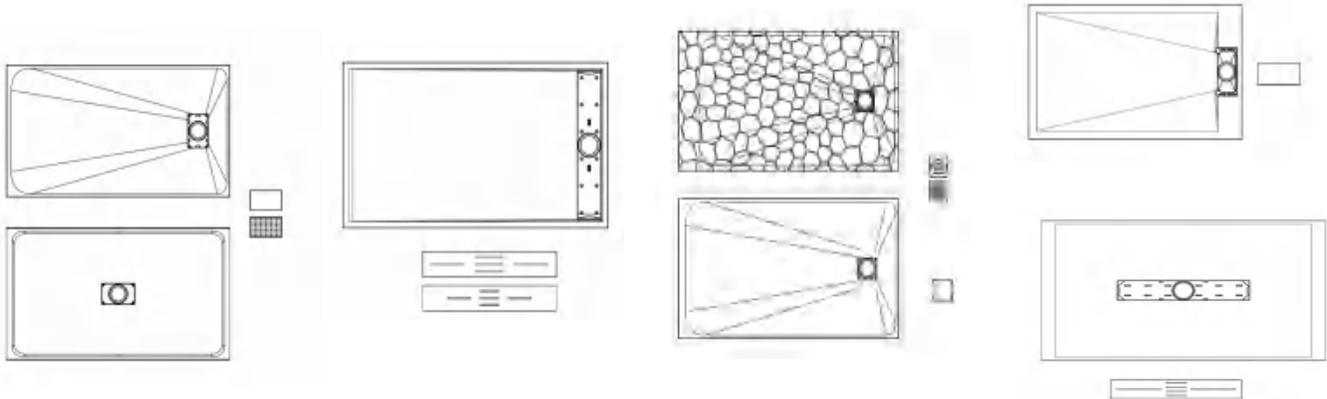

Tools and Materials






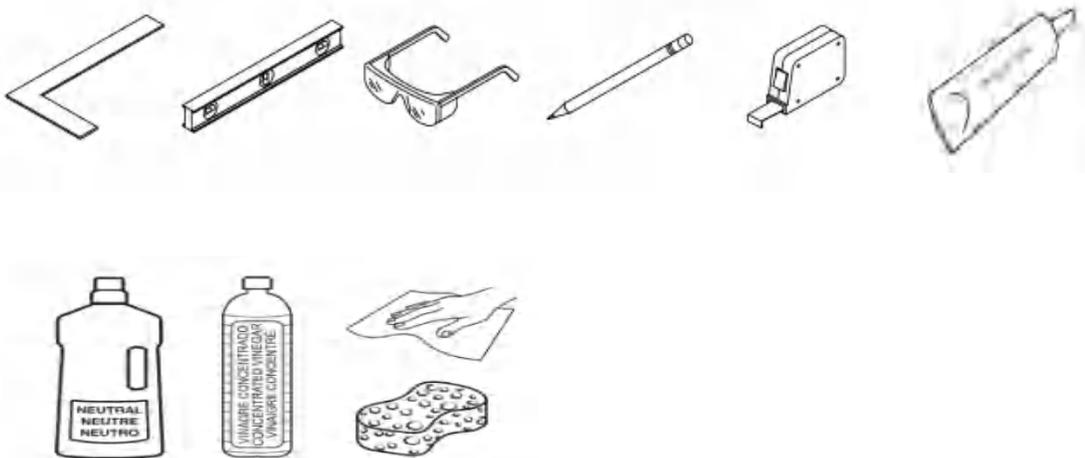


A-1 Installing into Wooden Floors

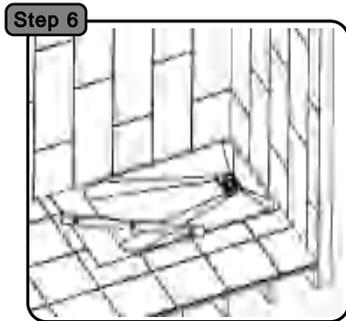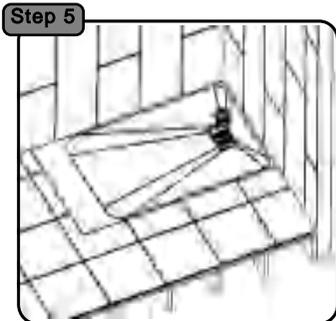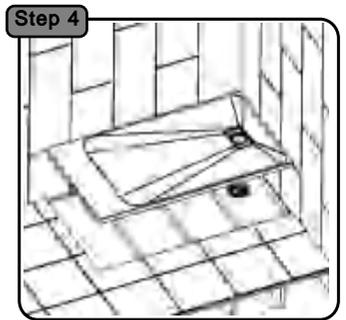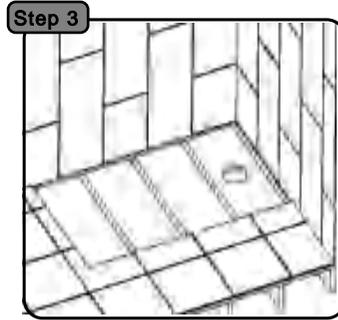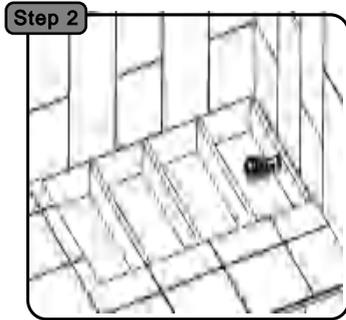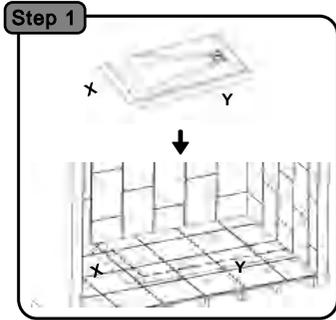

1. Reserve area for the shower base.
2. Install the bottom of the drainer, conduct a sealing test to ensure no leakage and firm installation.
3. Lay the floor or add wood frame strips to strengthen the firmness. If to lay the floor, make sure the position reserved for the outlet being with a hole 120 or above.
4. Place the shower base.
5. Install the upper part of the drainer.
6. Use a level to measure & ensure horizontal placement. Perform drainage test. Make sure the sewage pipe is unblocked and no pooling water on the surface. Please do not use the shower base before the silicone dried.


A-2 Installing into Tile Floors

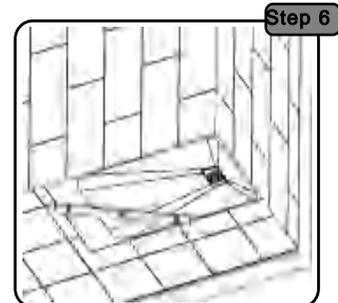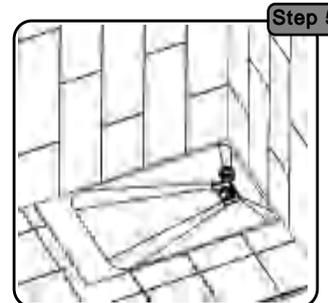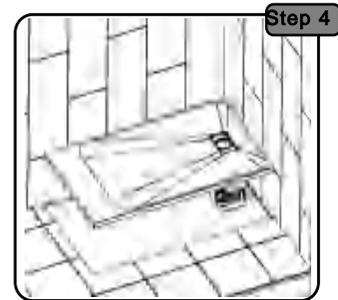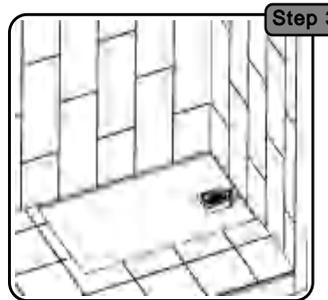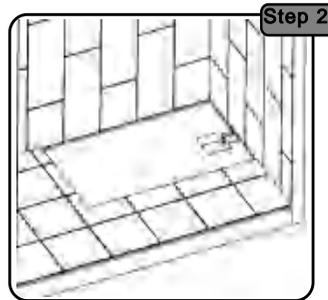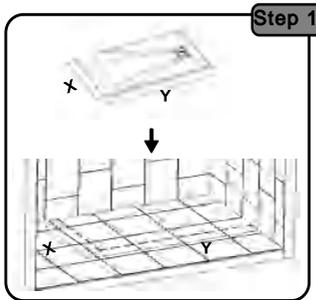


1. Reserve area for the shower base.
2. Measure and reserve the position of the drain.
3. Install the bottom of the drainer, conduct a sealing test to ensure no leakage and firm installation.
4. Place the shower base.
5. Install the upper part of the drainer.
6. Use a level to measure & ensure horizontal placement. Perform drainage test. Make sure the sewage pipe is unblocked and no pooling water on the surface. Please do not use the shower base before the silicone dried.

B Installing onto Concrete or Wooden Flooring


Step 1

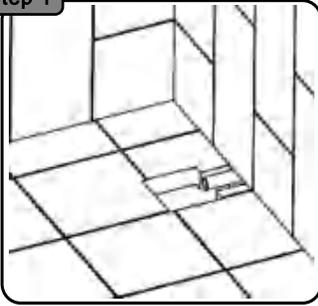


Step 2

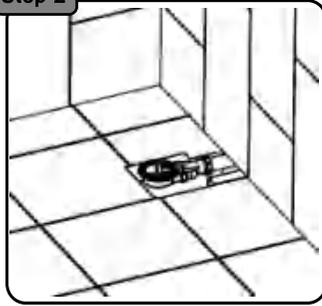

Step 3

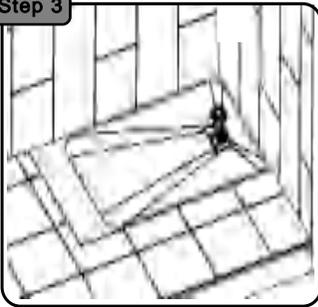

Step 4

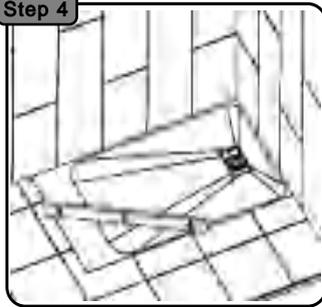

1. Measure and reserve the position of the drain.
2. Install the bottom of the drainer, conduct a sealing test to ensure no leakage and firm installation.
3. Place the shower base and install the upper part of the drainer.
4. Use a level to measure & ensure horizontal placement. Perform drainage test. Make sure the sewage pipe is unblocked and no pooling water on the surface. Please do not use the shower base before the silicone dried.



Allow the shower base to cure for 24 hours before working in the area.